


Vaddio™ CeilingVIEW™ Visualizer Power/Video and Control Pinouts



Vaddio CeilingVIEW Visualizer


Power/Video Connection - RJ-45 on CeilingVIEW Back Box

#	Pins
1)	Power (+)
2)	Power GND
3)	Video GND
4)	Y (luminance)
5)	Video GND
6)	C (chrominance)
7)	Video GND
8)	Composite Video

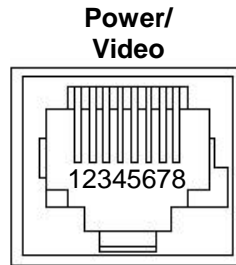

RS-232 IN Connection - RJ-45 on CeilingVIEW Back Box



#	Pins
1)	DTR (Sony® Daisy chain to DSR)
2)	DSR (Sony Daisy chain from DTR) *
3)	Unused
4)	Unused
5)	Unused
6)	Digital GND
7)	RXD (from TXD of control source)
9)	TXD (to RXD of control source)

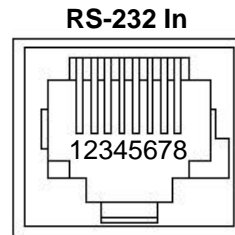



*Note: CeilingVIEW Visualizer can only be in the last position in a Sony control daisy chain.

Power/Video Connection - RJ-45 on Quick-Connect™ Box

#	Pins
1)	Power (+)
2)	Power GND
3)	Video GND
4)	Y (luminance)
5)	Video GND
6)	C (Chrominance)
7)	Video GND
8)	Composite Video

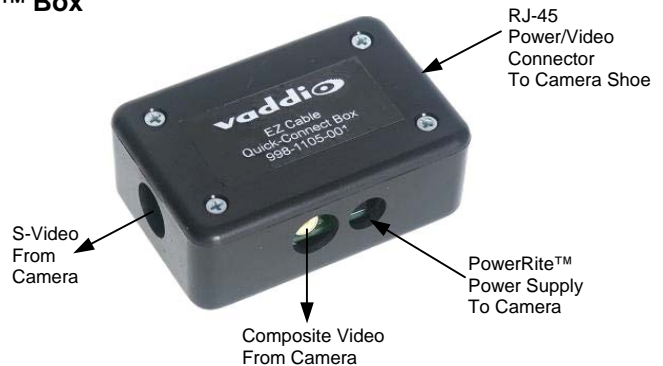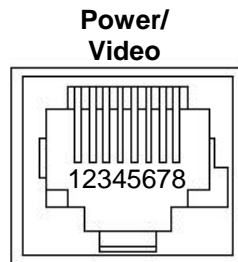

EZCamera™ Control Adapter – DB-9F to RJ-45F - Front view and side view

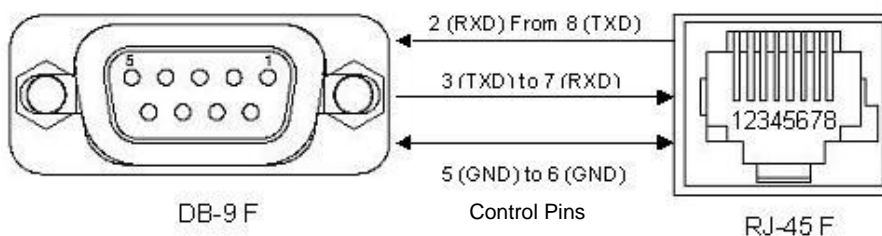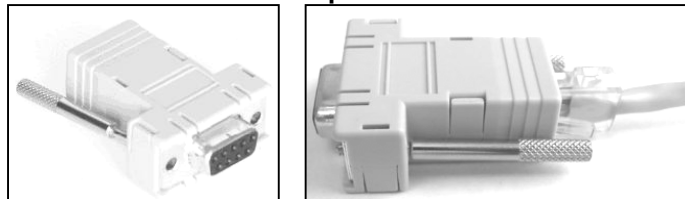

Other Pins Required for Daisy Chain Control Standard

Sony Control Daisy Chain	
DB-9F	RJ-45F
Pin 4	Pin 1 – DTR
Pin 6	Pin 2 – DSR

Canon Control Daisy Chain	
DB-9F	RJ-45F
Pin 8	Pin 3 – CTS
Pin 7	Pin 4 – RTS

The EZCamera Control Adapter is provided completely wired. Pin 1 on the DB-9 and Pin 5 on the RJ-45F are not used. All others are wired as specified above.